

VIN:	XXXXXXX	Vehicle:	X'E84/OFF-ROAD VEHICLE/X1 18dX/N47/MANUAL/EUR/RL/2015/01
System Version:	3.47.30.13232	Data Version:	R3.47.30.13232

26 11 000

Removing and installing complete propeller shaft (flexible disc at rear)



Special tools required:

- [00 9 120](#)
- [00 9 130](#)



Important!


On four-wheel drive vehicles with defective, non-engaging drive, it is imperative that the following information is taken account of.

- [Additional work when replacing propeller shaft.](#)




Necessary preliminary tasks:

- Remove [underbody protection](#) (only non-all-wheel drive vehicles)
- Remove complete exhaust system
- Remove heat shields

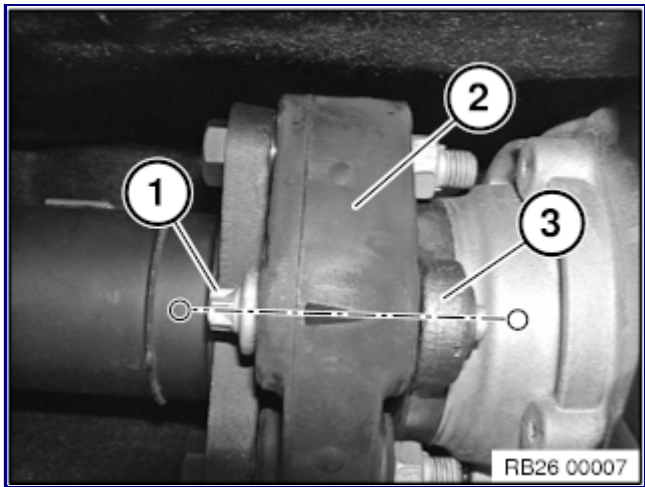

Important!


- To avoid buzzing sound after refitting the propeller shaft:
1. The flexible disc connection (1) on the front and back at the propeller shaft **must** be marked in one plane with the flexible disc (2) and the three-bolt flange (3) before removal.
 2. During installation the three-bolt flange (3) must be forced back together again with the flexible disc (2) in the same position.
 3. Replace ZNS bolts and self-locking nuts.

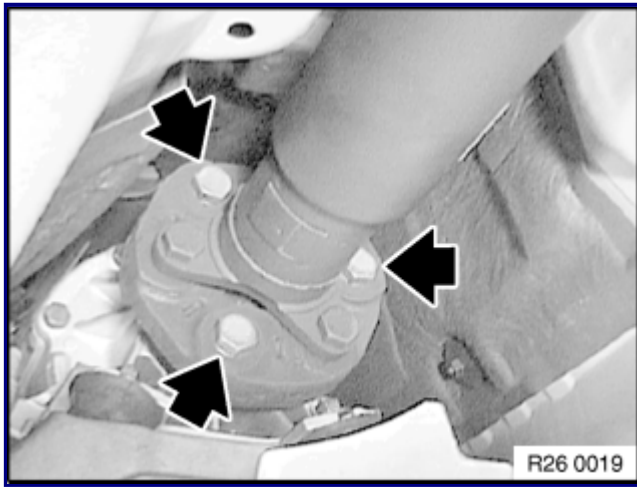

Release screws.

Installation note:


- Replace ZNS bolts and self-locking nuts.
- Grip mounting bolts of flexible disc at nuts and tighten down by way of bolts.

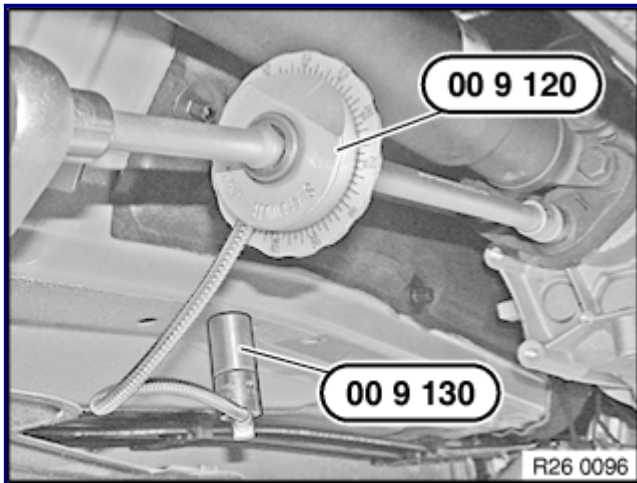

Tighten down screws/bolts to specified torque.

Secure angle of rotation special tool [00 9 120](#) with magnets [00 9 130](#) to vehicle underbody and screw down further according to angle of rotation.

Tightening torque: [26 11 1AZ](#).

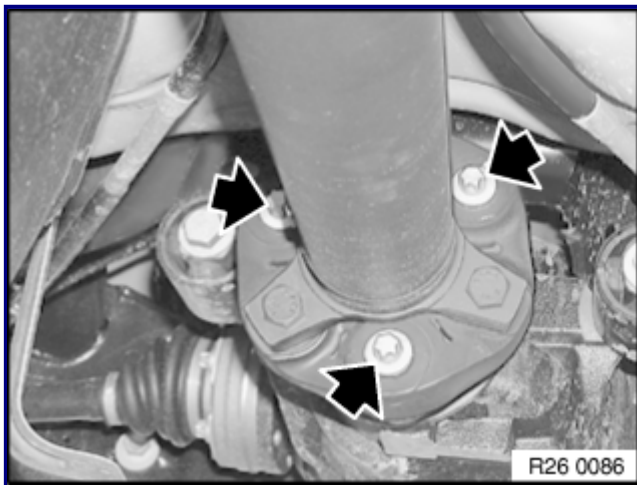

Release flexible disc screws at rear.



Installation note:

Replace ZNS bolts and nuts.

Tighten down screws/bolts to specified torque.

Secure to [00 9 120](#) with magnets [00 9 130](#) to vehicle underbody and screw down further according to angle of rotation.


Tightening torque: [26 11 4AZ](#).

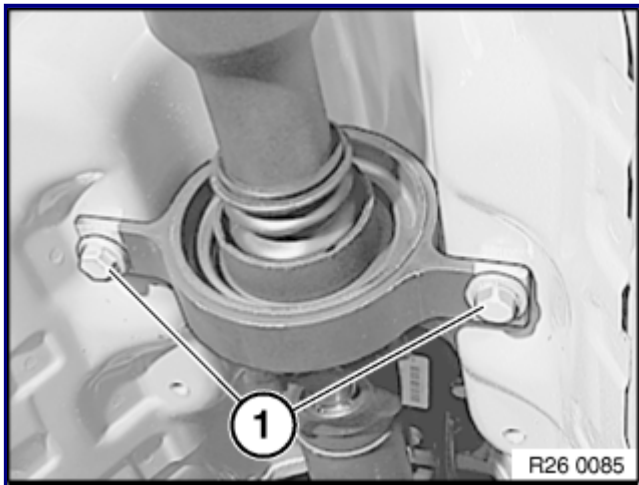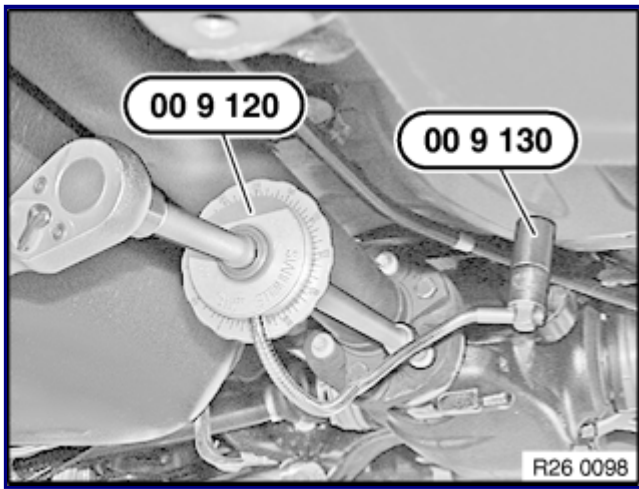

Grip propeller shaft at centre mount and release screws.

Tightening torque: [26 11 6AZ](#).

Detach propeller shaft from transmission output flange and remove towards bottom.

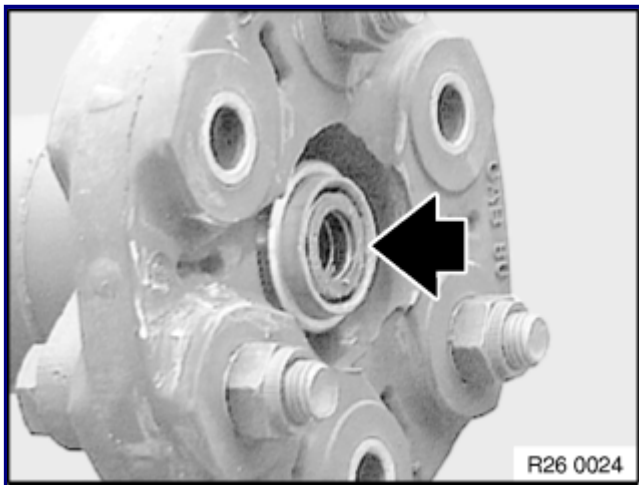

Installation note:

Check centring mount.

If necessary, replace damaged [centre bearing](#).

Grease centring mount.

- Grease: BMW Service [Operating Fluids](#).